

SINGER

114W100

PRICE LIST

OF

PARTS



MACHINE No. 114 w 100

THE SINGER MANUFACTURING COMPANY

INDEX

| | PAGE |
|------------------------------|------|
| ACCESSORIES..... | 13 |
| MACHINE No. 114 w 100..... | 7 |
| NEEDLES..... | 14 |
| NUMERICAL LIST OF PARTS..... | 21 |
| OBSOLETE PARTS..... | 19 |
| PRESSER FEET..... | 15 |
| STAND..... | 16 |
| UNDER DRIVER..... | 17 |

INSTRUCTIONS FOR ORDERING

In ordering from this list, use **ONLY** the **PART** number in the **FIRST** column.

The number stamped on a Sewing Machine Part is the number of the Single Part only, except when the part includes Set Screws, Clamping Screws, Studs and Rollers Spun on, Small Wires riveted, or Parts soldered together, etc., which it is necessary to furnish in combination.

Every combination of parts sent out has its specific number which, although not stamped on Parts (except in above cases) must be used when ordering the combination.

Each number always indicates the **SAME PART** in whatever list it appears, or for whatever Machine.

The letters after some of the numbers indicate the style of finish only, as follows:

- A. Hardened, Polished and Plated.
- B. Polished and Plated.
- C. Hardened only.
- D. Polished only.
- E. Soft, not polished.
- F. Hardened and Polished.
- H. Blued.

These letters **MUST BE USED** when they appear in the list and **AFTER** the number, as in the list.

In this series

200001 to 201500 are Screw Numbers.

201501 to 201800 are Nut Numbers.

201801 to 202000 are Roller Numbers.

202001 and upward are numbers of Machine Parts.

 
The figures in the second column refer only to the plate in which the illustration of the part is shown and are **NOT TO BE USED** in ordering.

Two or more numbers over a cut indicate that the difference between such parts is not visible in an illustration.

Parts marked with an asterisk (*) are furnished only when repairs are made at the factory.

LIST OF PARTS COMPLETE

FOR

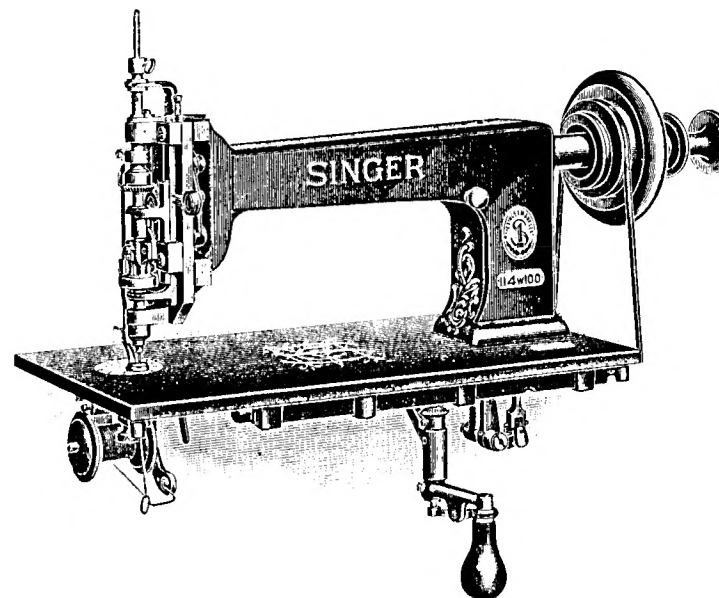

MACHINE No. 114 w 100

CHAIN STITCH EMBROIDERY

| No. | Plate | Name | Each |
|---------|-------|---------------------------------|------|
| *222401 | | Arm with two 222404 | \$ — |
| 222530 | 12131 | " Head | 4 50 |
| 222404 | 12132 | " " Position Pin | 02 |
| 201012D | 12132 | " " Screw (lower) | 04 |
| 200014D | 12132 | " " " (upper) (2) | 05 |
| 222405 | 12131 | " " Sleeve | 1 25 |
| 222406 | 12132 | " " " Bearing | 75 |
| 222404 | 12132 | " " " " Position Pin | 02 |
| 200571E | 12132 | " " " " Screw | 05 |
| 222407 | 12132 | " " " " Cap | 25 |
| 200112H | 12132 | " " " " Screw | 03 |
| 222408 | 12132 | " " " " Gear with 200119E | 40 |
| 200149F | 12132 | " " " " Set Screw | 03 |
| 202004 | 12132 | " Position Pin (2) | 02 |
| 200029E | 12132 | " Screw (1) | 05 |
| 222411 | 12131 | " Shaft | 1 45 |

| No. | Plate | Name | Each |
|---------|-------|---|-------|
| 203244 | 12432 | Arm Shaft Collar with two 200393e | \$ 20 |
| 200393e | 12432 | " " " Set Screw | 02 |
| 222412 | 12432 | " " Driving Flange with 200098e and 201032e | 60 |
| 201032e | 12432 | Arm Shaft Driving Flange Position Screw | 01 |
| 200098e | 12432 | Arm Shaft Driving Flange Set Screw | 03 |
| 222413 | — | " Side Cover | 60 |
| 201048u | 12432 | " " " Thumb Screw | 10 |
| *222414 | — | Bed | — |
| 222415 | 12431 | Driving Pulley | 1 00 |
| 222416 | 12431 | " " Sleeve | 75 |
| 200062u | 12432 | " " " Screw | 07 |
| 222417 | 12432 | Feed Bell Crank with 200035e and 201864 | 70 |
| 201037e | 12432 | Feed Bell Crank Hinge Screw | 10 |
| 201864 | 12432 | " " " Roller | 15 |
| 201035e | 12432 | " " " " Screw | 05 |
| 222418 | 12433 | " Lever | 35 |
| 222419 | 12433 | " " Bracket with 200125e and 200397e | 70 |
| 222420 | 12433 | Feed Lever Bracket Guide | 45 |
| 222421 | 12433 | " " " " Bearing | 35 |
| 222422 | — | Feed Lever Bracket Guide Bearing 222421 with 222420, 222421 and two 200581u | 1 10 |
| 222423 | 12433 | Feed Lever Bracket Guide Bearing Pin | 02 |
| 222424 | 12433 | " " " " Cap | 25 |
| 200581u | 12433 | " " " " " Screw | 02 |
| 200125e | 12433 | " " " " Set Screw | 02 |
| 200397e | — | " " " " " " | 02 |
| 222425 | 12433 | " " Hinge Pin | 03 |
| 222426 | 12433 | " Recovering Spring (left) | 01 |
| 222427 | 12433 | " " " (right) | 01 |
| 201051b | 12433 | " " " " Screw | 05 |
| 201034e | 12433 | " Regulating Screw | 12 4 |
| 201621e | 12433 | " " " Lock Lever Nut | 15 |
| 222428 | 12433 | " Rotating Gear (upper) (rear) with 200119e | 40 |
| 200119e | 12432 | Feed Rotating Gear (upper) (rear) Set Screw | 02 |
| 222429 | 12431 | Feed Rotating Shaft | 25 |
| 222430 | 12433 | " " " Gear with two 200377e | 35 |
| 200377e | 12432 | Feed Rotating Shaft Gear Set Screw | 02 |
| 222431 | 12434 | " Slide Bar | 90 |
| 222432 | 12433 | " " Block | 50 |
| 222433 | 12433 | Looper | 60 |
| 222434 | 12434 | " Bracket | 60 |
| 222404 | 12432 | " " Position Pin (2) | 02 |
| 201058e | 12433 | " " " Screw (back) | 05 |

| No. | Plate | Name | Each |
|---------|-------|--|-------|
| 201038e | 12133 | Looper Bracket Screw (front) | \$ 01 |
| 222435 | 12134 | " Operating Bell Crank with two 201057e | 65 |
| 222436 | 12134 | Looper Operating Bell Crank Bracket | 70 |
| 222437 | — | " " " " " " | 2 00 |
| 202001 | 12132 | Looper Operating Bell Crank Bracket Position Pin (2) | 02 |
| 201038e | 12133 | Looper Operating Bell Crank Bracket Screw (long) (2) | 04 |
| 201058e | 12133 | Looper Operating Bell Crank Bracket Screw (short) | 05 |
| 222438 | 12135 | Looper Operating Bell Crank Hinge Block (2) | 12 |
| 201057e | 12135 | Looper Operating Bell Crank Hinge Block Screw Stud | 05 |
| 201047e | 12135 | Looper Operating Bell Crank Hinge Screw | 48 |
| 201622e | 12135 | Looper Operating Bell Crank Hinge Screw Nut | 05 |
| 222439 | 12135 | Looper Operating Cam | 60 |
| 222526 | 12135 | " " " Position Pin | 02 |
| 222440 | 12134 | " " Connection | 60 |
| 222441 | — | " " " 222440 with 222435, 222442 and two 205510 | 1 50 |
| 222442 | 12135 | Looper Operating Connection Swivel | 25 |
| 205510 | 12135 | " " " " Hinge Pin | 03 |
| 222443 | 12135 | Looper Operating Gear (spiral) with 200119e | 60 |
| 200119e | 12132 | Looper Operating Gear Set Screw | 03 |
| 222444 | 12134 | " " Shaft | 50 |
| 222445 | 12135 | " " " Guide Block with 201052e | 12 |
| 201052e | 12135 | Looper Operating Shaft Guide Block Set Screw | 02 |
| 222446 | 12135 | Looper Operating Shaft Sleeve | 60 |
| 222447 | 12435 | " " " " Gear (back or front) with 200119e | 35 |
| 200119e | 12132 | Looper Operating Shaft Sleeve Gear Set Screw | 03 |
| 222448 | 12135 | Looper Position Plate | 10 |
| 200132e | 12435 | " " " " Screw | 02 |
| 222449 | 12135 | Needle Driving Cam with 200142e and 222450 | 60 |
| 200442e | 12135 | Needle Driving Cam Position Screw | 04 |
| 201853 | 12135 | " " " Roller | 10 |
| 222450 | 12135 | " " " " Stud | 05 |
| 222451 | 12137 | " Holder | 35 |

| No. | Plate | Name | Each |
|---------|-------|---|-------|
| 222452 | 12437 | Needle Holder Clamping Sleeve with 201053c | \$ 75 |
| 201053c | 12435 | Needle Holder Clamping Sleeve Thumb Screw | 10 |
| 222453 | 12431 | Needle Operating Slide | 1 75 |
| 222454 | 12436 | " Plate, for needle sizes 1 to 12.... | 55 |
| 201049d | 12435 | " " Clamping Thumb Screw.... | 15 |
| 222456 | — | Nipple, for No. 2 needle | 12 |
| 222466 | 12436 | " Carrier | 1 00 |
| 222467 | 12436 | " " Bell Crank | 50 |
| 222531 | 12436 | " " " " Hinge Stud | 20 |
| 201074c | 12436 | " " " " " " Set Screw | 04 |
| 222468 | 12436 | Nipple Carrier Guide Block (brass) | 30 |
| 222469 | 12436 | " " " " Pin (long) ... | 01 |
| 222470 | 12436 | " " " " " (short).... | 01 |
| 200027E | 12436 | " " " " Screw | 04 |
| 200683c | 12436 | " " Lifting Screw Stud | 05 |
| 222471 | 12436 | " " Spring | 05 |
| 222472 | 12438 | Presser Foot with 222479 | 75 |
| 222473 | 12439 | " " Clamp with 201053c..... | 40 |
| 201053c | 12435 | " " " Thumb Screw | 10 |
| 222474 | 12437 | " " Lever | 1 25 |
| 222475 | — | " " " 222471 with 222422, 222123, 222476 and 222177 | 3 00 |
| 222476 | 12439 | Presser Foot Lever Swivel | 60 |
| 222477 | 12439 | " " " Hinge Pin.... | 02 |
| 222478 | 12439 | " " Lifter | 25 |
| 200943F | 12439 | " " " Hinge Screw | 10 |
| 222479 | — | " " Shoe (rubber) | 01 |
| 222480 | 12437 | " " Slide Bar | 1 00 |
| 222481 | 12439 | " " " " Guide Block (brass) | 18 |
| 200066d | 12439 | Presser Foot Slide Bar Guide Block Screw | 03 |
| 222482 | 12437 | Presser Foot Slide Bell Crank | 50 |
| 201041c | 12436 | " " " " " Hinge Screw | 08 |
| 222483 | 12439 | Presser Foot Slide Guide Block (brass) .. | 30 |
| 222470 | 12436 | " " " " " Pin | 01 |
| 200054E | 12439 | " " " " " Screw .. | 03 |
| 222484 | 12439 | " " " Spring | 05 |
| 222485 | 12437 | Spool Holder and Tension Bracket | 50 |
| 201038E | 12433 | " " " " " Screw (2) | 04 |
| 222486 | — | Spool Holder and Tension Bracket complete, Nos. 200132E, 201036E, 201039E, 201040d, 201075E, 202248u, 222485 and 222512 to 222515 | 1 50 |
| 201036E | 12439 | Spool Screw Stud | 08 |

| No. | Plate | Name | Each |
|---------|-------|---|-------|
| 222487 | 12439 | Starting Trip Lever with 201051c..... | \$ 20 |
| 222488 | 12439 | " " " " Block | 08 |
| 201051c | 12439 | " " " " Screw Stud | 05 |
| 201035E | 12432 | " " " " Hinge Screw | 05 |
| 222489 | 12437 | " " " " (intermediate) | 35 |
| 201033d | 12436 | " " " " Hinge Screw Stud | 08 |
| 222490 | 12439 | Starting Trip Lever Rod | 05 |
| 222491 | 12440 | " " " " Slide | 50 |
| 222492 | 12440 | " " " " Cap | 05 |
| 200110d | 12440 | " " " " " Screw.... | 02 |
| 222493 | 12440 | " " " " " Spring | 04 |
| 222494 | 12440 | Stitch Rotating Gear (lower) (for vertical shaft) with 200119F | 35 |
| 200119F | 12432 | Stitch Rotating Gear (lower) Set Screw .. | 03 |
| 222428 | 12433 | " " " " (upper) (for vertical shaft) with 200119F | 40 |
| 200119F | 12432 | Stitch Rotating Gear (upper) Set Screw .. | 03 |
| 222495 | 12437 | " " " " Bracket | 1 00 |
| 202001 | 12432 | " " " " Position Pin (2) | 02 |
| 201028E | 12433 | Stitch Rotating Gear Bracket Screw (2) .. | 04 |
| 222496 | 12440 | " " " " Shaft (intermediate) | 10 |
| 222428 | 12433 | Stitch Rotating Gear Bracket Shaft (intermediate) Gear (back or front) with 200119F (2) | 40 |
| 200119F | 12432 | Stitch Rotating Gear Bracket Shaft (intermediate) Gear Set Screw | 03 |
| 222497 | 12437 | Stitch Rotating Gear Shaft (vertical).... | 15 |
| 222498 | 12437 | " " Hand Lever with 200084F .. | 60 |
| 222503 | — | " " " " 222498 with 201035E, 222487, 222488 and 222501.... | 1 40 |
| 222499 | — | Stitch Rotating Hand Lever Handle (wood) | 25 |
| 222500 | — | Stitch Rotating Hand Lever Handle Sleeve | 25 |
| 222501 | 12437 | Stitch Rotating Hand Lever Handle Sleeve 222500 with 206134 and 222499 .. | 50 |
| 206134 | 12440 | Stitch Rotating Hand Lever Handle Sleeve Washer | 02 |
| 200081F | 12440 | Stitch Rotating Hand Lever Set Screw .. | 03 |
| 222501 | 12440 | " " " " Shaft | 50 |
| 222447 | 12435 | " " " " " Gear with 200119F | 35 |
| 200119F | 12432 | Stitch Rotating Hand Lever Shaft Gear Set Screw | 03 |
| 222505 | 12434 | Stop Bracket | 70 |
| 222506 | 12440 | " " Interlocking Rod | 30 |
| 200680F | 12440 | " " " " Guide Screw | 04 |

| No. | Plate | Name | Each |
|---------|-------|---|--------|
| 222507 | 12440 | Stop Bracket Interlocking Rod Spring .. | \$.05 |
| 201038E | 12433 | " " Screw (2) | .04 |
| 222508 | 12440 | " Cam with 222509 | 1 20 |
| 222509 | 12440 | " " Driving Stud | .04 |
| 222510 | 12440 | " " Locking Lever with 201055F .. | .50 |
| 201043C | 12440 | " " " " Hinge Screw .. | .08 |
| 201863 | 12440 | " " Roller | .10 |
| 201055F | 12440 | " " " Screw Stud | .05 |
| 222511 | 12441 | " " Spring | .05 |
| 205510 | 12435 | " " " Pin | .03 |
| 222512 | 12441 | Tension Regulating Lever with 201056D | .20 |
| 201075F | 12441 | " " " " Hinge Screw .. | .05 |
| 202248H | 12441 | " " " " " " " " " " " " | |
| | | Spring Washer | .05 |
| 222513 | 12441 | Tension Regulating Plate | .30 |
| 201040D | 12441 | " " " " " Hinge Screw .. | .12 |
| 201056D | 12441 | " " " Screw Stud | .08 |
| 222514 | 12441 | " " Spring | .05 |
| 201039E | 12441 | " " " Screw Stud | .06 |
| 222515 | 12441 | Thread Controller Spring | .08 |
| 200132E | 12435 | " " " Screw | .02 |

ACCESSORIES

| No. | Plate | Name | Each |
|---------|-------|---|--------|
| 222517 | 12442 | Cleaning Wire (brass) | \$.05 |
| 114 x 1 | | Needles (11), in sizes as selected. Sup- plied in sizes 1 to 12.....Per Doz. | 30 |
| 222515 | 12436 | Nipple for No. 1 needle | .12 |
| 222517 | | " " " 3 needle | .12 |
| 222518 | | " " " 4 needle | .12 |
| 222519 | | " " " 5 needle | .12 |
| 222520 | | " " " 6 needle | .12 |
| 222521 | | " " " " Carrier Spring (heavy) | .05 |
| 222522 | 12111 | " Wrench | .08 |
| 222523 | 12438 | Presser Foot (spur) | .70 |
| 222524 | | " " Slide Spring (heavy) | .05 |
| 222525 | 12111 | Spool Winder Spindle | .25 |
| 222526 | 12111 | " " " Washer | .05 |
| 222527 | 12112 | Thread Knife | .18 |
| 222528 | 12112 | Threader Wire | .04 |
| 222529 | 12112 | Tweezers | .35 |
| 222530 | 12112 | Oil with 222531 | .10 |
| 222531 | 12112 | " Spout, 2 3/4 in. long | .02 |
| 26346 | 12112 | Pliers | .25 |
| 25537 | 12112 | Screw Driver | .10 |
| 11821 | 12112 | " " | .20 |
| 222523 | 12112 | Spool (wood) (6) | .05 |

NIPPLES

| No. | Plate | Name | Each |
|--------|-------|--------------------------------|-------|
| 222455 | 12436 | Nipple, for No. 1 needle | \$ 12 |
| 222456 | ----- | " " " 2 needle | 12 |
| 222457 | ----- | " " " 3 needle | 12 |
| 222458 | ----- | " " " 4 needle | 12 |
| 222459 | ----- | " " " 5 needle | 12 |
| 222460 | ----- | " " " 6 needle | 12 |
| 222461 | ----- | " " " 7 needle | 12 |
| 222462 | ----- | " " " 8 needle | 12 |
| 222463 | ----- | " " " 9 needle | 12 |
| 222464 | ----- | " " " 10 needle | 12 |
| 222528 | ----- | " " " 11 needle | 12 |
| 222465 | ----- | " " " 12 needle | 12 |

PRESSER FEET

| No. | Plate | Name | Each |
|--------|-------|---------------------------------|-------|
| 222472 | 12438 | Presser Foot, with 222479 | \$ 75 |
| 222527 | 12438 | " " " 222529 | 75 |
| 222522 | 12438 | " " (spur) | 70 |
| 222529 | ----- | " " Shoe (rubber) | 01 |

STAND

ROCKING TREADLE, BALL BEARING PITMAN

| No. | Plate | Name | Each |
|--------|-------|---|---------|
| 46532 | 12444 | Band Wheel, 18 in. diam., with 972c..... | \$ 1 50 |
| 46519 | 12414 | " " Crank | 15 |
| 46520 | ----- | Band Wheel Crank and Pitman (ball bearing) complete, Nos. 1520e, 1670e, 25361, 25371, 46506 to 46509, 46519, 46523 and eleven 25362 | 1 45 |
| 296c | 12443 | Band Wheel Crank Screw Center..... | 10 |
| 1507e | 12443 | " " " " Nut..... | 05 |
| 972c | 12443 | " " Set Screw | 08 |
| 222533 | ----- | Belt, size $\frac{1}{2}$ in., length 71 $\frac{1}{2}$ in., with 225129 | 20 |
| 225129 | 12443 | Belt Hook | 01 |
| 46533 | 12441 | Brace with 296c, two 297c and three 1507e | 1 45 |
| 718e | 12443 | Brace Screw | 08 |
| 46522 | 12411 | Leg | 1 60 |
| 25362 | 12321 | Pitman Ball, size $\frac{3}{8}$ inch | 02 |
| 46506 | 12443 | " " Bearing Adjusting Screw Ring | 15 |
| 46507 | 12443 | Pitman Ball Bearing Adjusting Screw Ring Locking Washer (brass) Per 100 | 25 |
| 46508 | 12443 | Pitman Ball Bearing Ring | 10 |
| 46509 | 12413 | " " Case | 25 |
| 46523 | 12411 | " Rod with 25360 | 15 |
| *25360 | ----- | " " Ball | — |
| 25371 | 12413 | " " " Bushing | 15 |
| 25361 | 12443 | " " " Screw Bearing | 10 |
| 1670e | 12443 | " " " " Nut | 05 |
| 1520e | 12443 | " " Lock Nut | 03 |
| 46524 | 12444 | Treadle | 65 |
| 297c | 12443 | " Screw Center | 10 |
| 1507e | 12443 | " " " Nut | 05 |
| 25086 | 12441 | Wrench, for 1507 and 1670 | 10 |
| 25200 | 12414 | " " 972..... | 10 |
| 25267 | ----- | Stand (iron work) rocking treadle, ball bearing pitman complete, Nos. 25086, 25200, 46520, 46524, 46532, 46533, two 46522 and four 748e | — |

UNDER DRIVER

BALL BEARING, RIGHT HAND, ROUND BELT, TWO SPEED

| No. | Plate | Name | Each |
|---------|-------|---|---------|
| 227370 | 11126 | Cone Pulley, two speed, 4 $\frac{1}{2}$ and 5 $\frac{1}{2}$ in. belt diam., with 227553 | \$ 1 35 |
| 25362 | 12321 | Cone Pulley Ball, size $\frac{3}{8}$ inch..... | 02 |
| 204100 | 12321 | " " " Bearing Cap | 12 |
| 204101 | 12321 | " " " Cap | 02 |
| 204102 | 12321 | " " " Retaining Spring | 05 |
| 227553 | 12322 | Cone Pulley Ball Cap complete, Nos. 204100 to 204102 and thirteen 25362 | 45 |
| 202459 | 11126 | Driving Pulley, 7 $\frac{1}{4}$ in. diam., with 202460 and 204105 | 75 |
| 202460 | 11126 | Driving Pulley Friction Ring (leather) .. | 05 |
| 204105 | 12321 | " " " " Stop Pin .. | 01 |
| 227743 | ----- | " " Shaft (bollow) with 204109, 204110, 204112 and two 204111 | 60 |
| 202461 | 11126 | Driving Pulley Shaft 227743 with 204107, 204108 and eleven 25303 | 1 00 |
| 25303 | 12321 | Driving Pulley Shaft Ball, size $\frac{1}{2}$ inch .. | 03 |
| 204107 | 12321 | " " " " Cap | 10 |
| 204108 | 12321 | " " " " " Cap..... | 02 |
| 204109 | ----- | " " " Oil Plug | 01 |
| 204110 | ----- | " " " Oiling Leather | 02 |
| 204111 | ----- | " " " " " Pin (leather) | 01 |
| 204112 | 12322 | Driving Pulley Shaft Oiling Wick | 01 |
| 200524c | 12321 | " " " Set Screw | 06 |
| 204113 | 12321 | " " " Thimble | 10 |
| 227734 | 11126 | Frame with 200524c | 80 |
| 202463 | 11126 | Lever (compression) with 204117, two each 200524c and 202845 | 45 |
| 227735 | 11126 | Lever Brake with 200524c, 204122 and two 200371c | 35 |
| 227736 | 11126 | Lever Brake 227735 with 200082p and 227737 | 60 |
| 227737 | 11126 | Lever Brake Belt Guard | 20 |
| 200082p | 12321 | " " " " Screw | 03 |
| 204122 | 12322 | " " Leather | 05 |
| 200374c | 12321 | " " " Set Screw | 02 |
| 200524c | 12321 | " " Set Screw | 06 |
| 204123 | 12322 | " " Spring | 05 |
| 204117 | 12321 | " Compression Plate | 10 |
| 202845 | 12321 | " " " Rivet | 01 |
| 202461 | 11126 | " " Shaft with 202302 | 20 |
| 202302 | 12321 | " " " Cotter Pin | 01 |

| No. | Plate | Name | Each |
|---------|-------|---|-------|
| 200524c | 12321 | Lever Compression Shaft Set Screw | \$ 06 |
| 27070 | 11126 | Shaft Pulley (sectional grooved), 10 in. diam., 1 $\frac{3}{4}$ in. bore with two 597c | 45 |
| 597c | 12441 | Shaft Pulley Clamping Screw | 98 |
| 227976 | 11126 | Treadle with 200540b | 45 |
| 227977 | 11126 | " 227976 with 227978 | 60 |
| 227978 | 11126 | " Adjustable Connecting Slide | 15 |
| 200540b | 12441 | " " " " Set Screw | 10 |
| 202468 | 11126 | Treadle Pitman Rod (lower or upper) .. | 05 |
| 204126 | 12321 | " " " Clamp with two 200530c | 20 |
| 200530c | 12321 | Treadle Pitman Rod Clamp Set Screw .. | 05 |
| 227980 | 11126 | Treadle Pitman complete, Nos. 204126 and two 202468 | 30 |
| 204127 | 11126 | Treadle Stand (left) with two wood screws 1 in. No. 13 | 08 |
| 204128 | 11126 | Treadle Stand (right) with two wood screws 1 in. No. 13 | 08 |
| 227981 | — | Treadle and Stand complete, Nos. 204127, 204128 and 227977 | 75 |
| 227982 | — | Treadle and Pitman complete, Nos. 227980 and 227981 | 90 |
| 227740 | — | Transmitter complete, Nos. 202459, 202461, 202463, 202464, 204143, 204123, 227370, 227734, 227736 and three wood screws 1 $\frac{3}{4}$ in. No. 15 | 3 00 |
| 227985 | — | Under Driver (ball bearing) lever pres- sure, right hand, two speed, complete, Nos. 27070, 227740 and 227982 | 4 00 |

OBSOLETE PARTS

222403 ——— Arm Head\$ 4 50

PLATE 11126—ONE-SIXTH SIZE

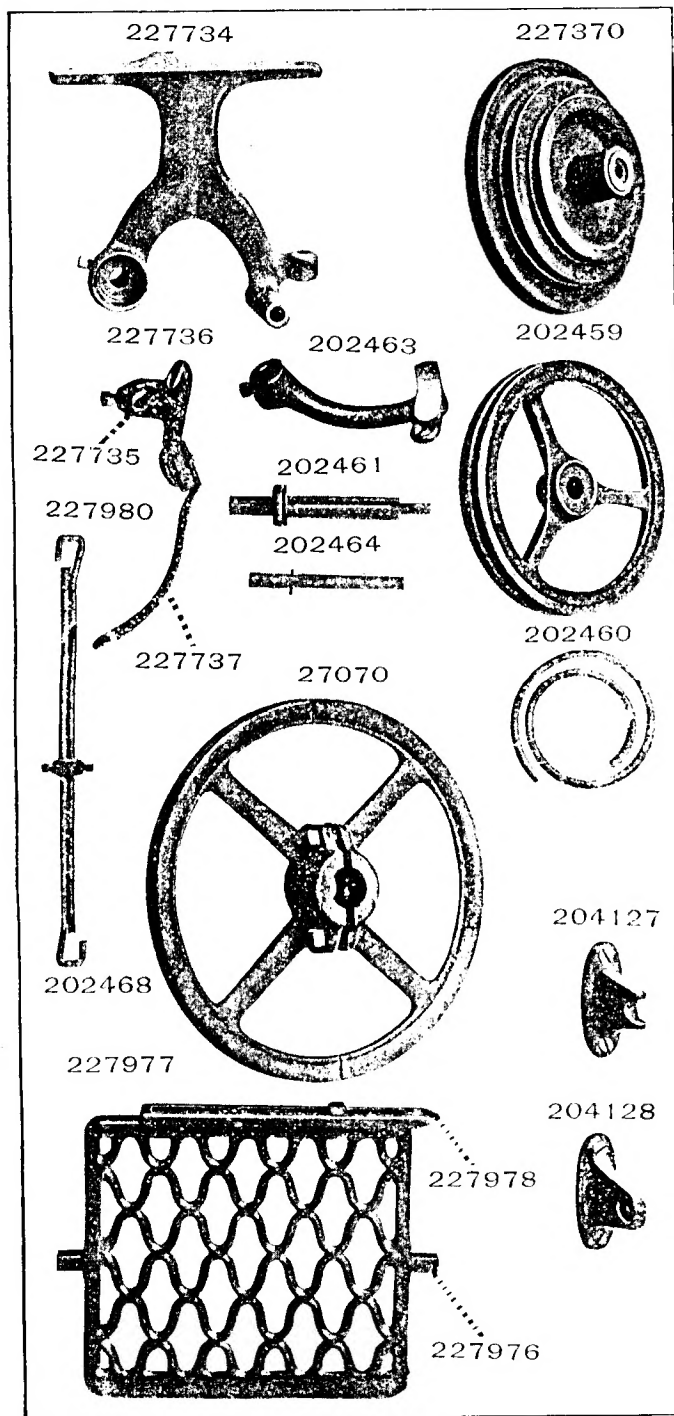 


PLATE 12321—FULL SIZE

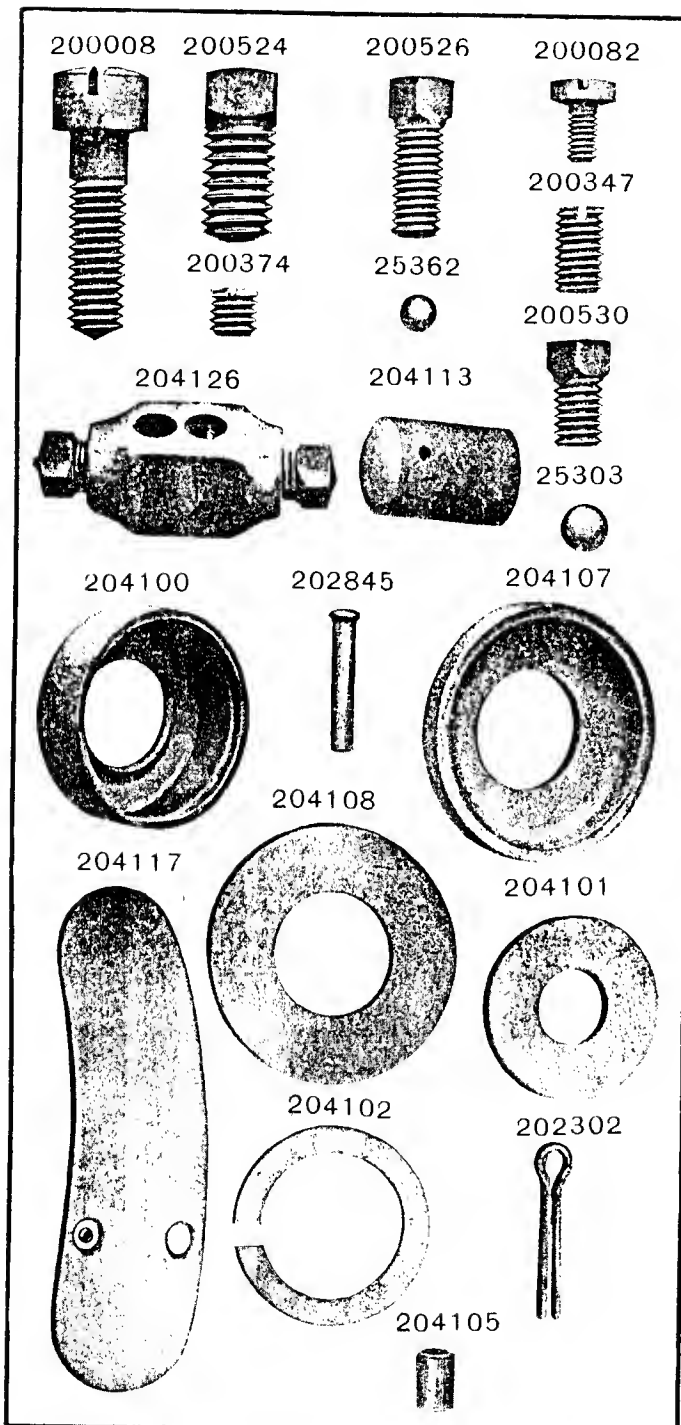 


PLATE 12322—FULL SIZE

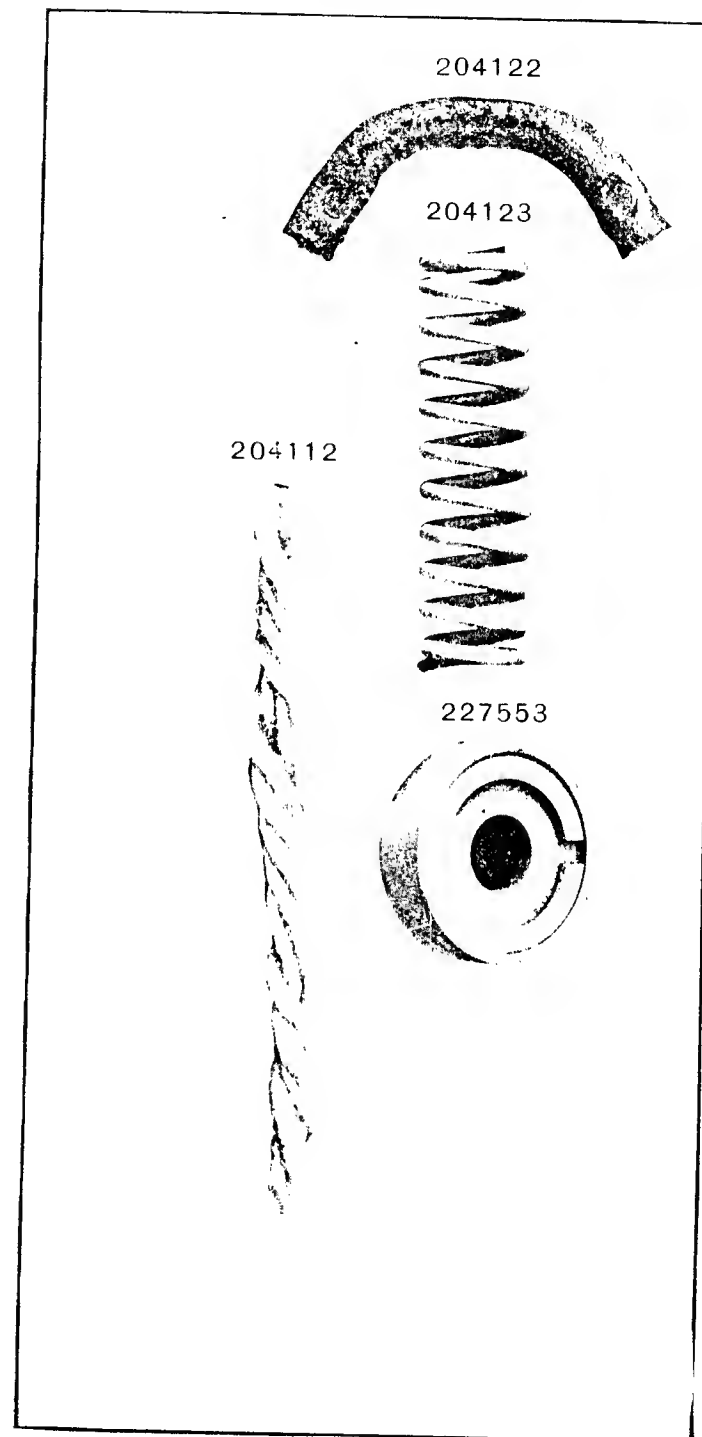 


PLATE 12431 - ONE-HALF SIZE

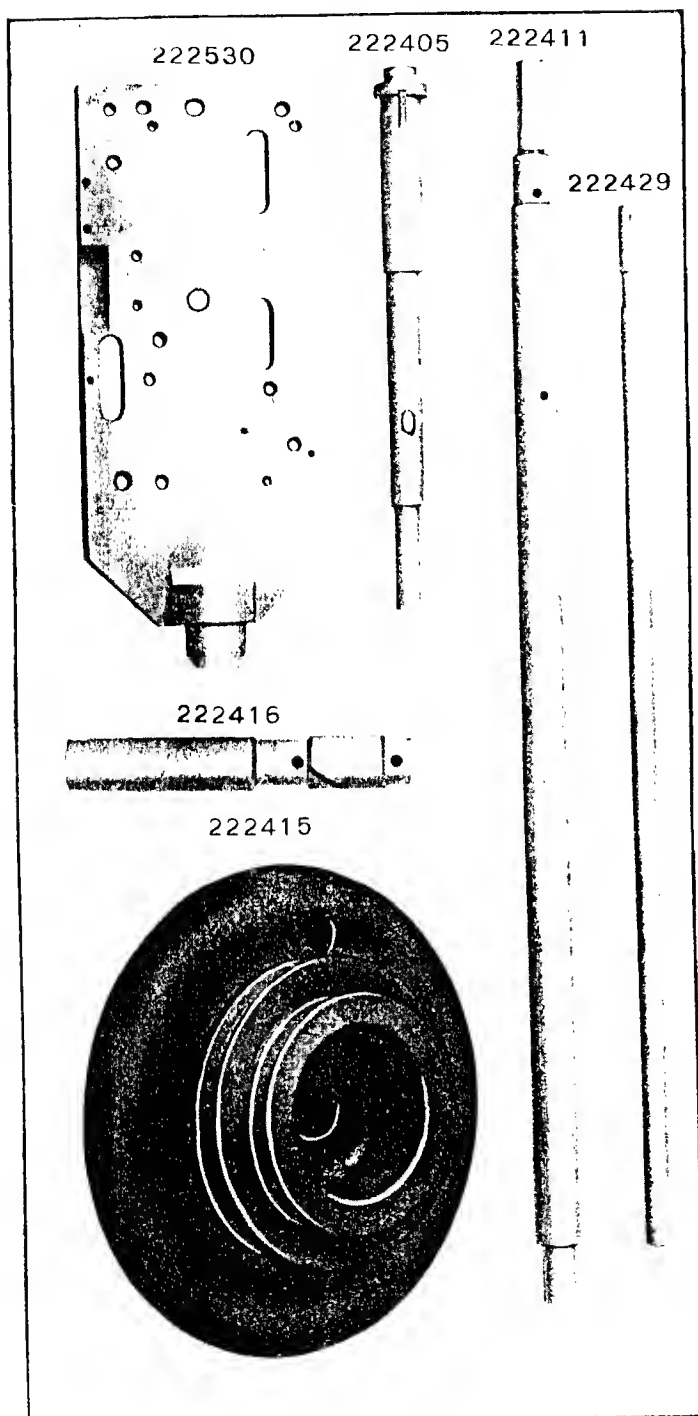 


PLATE 12432 - FULL SIZE

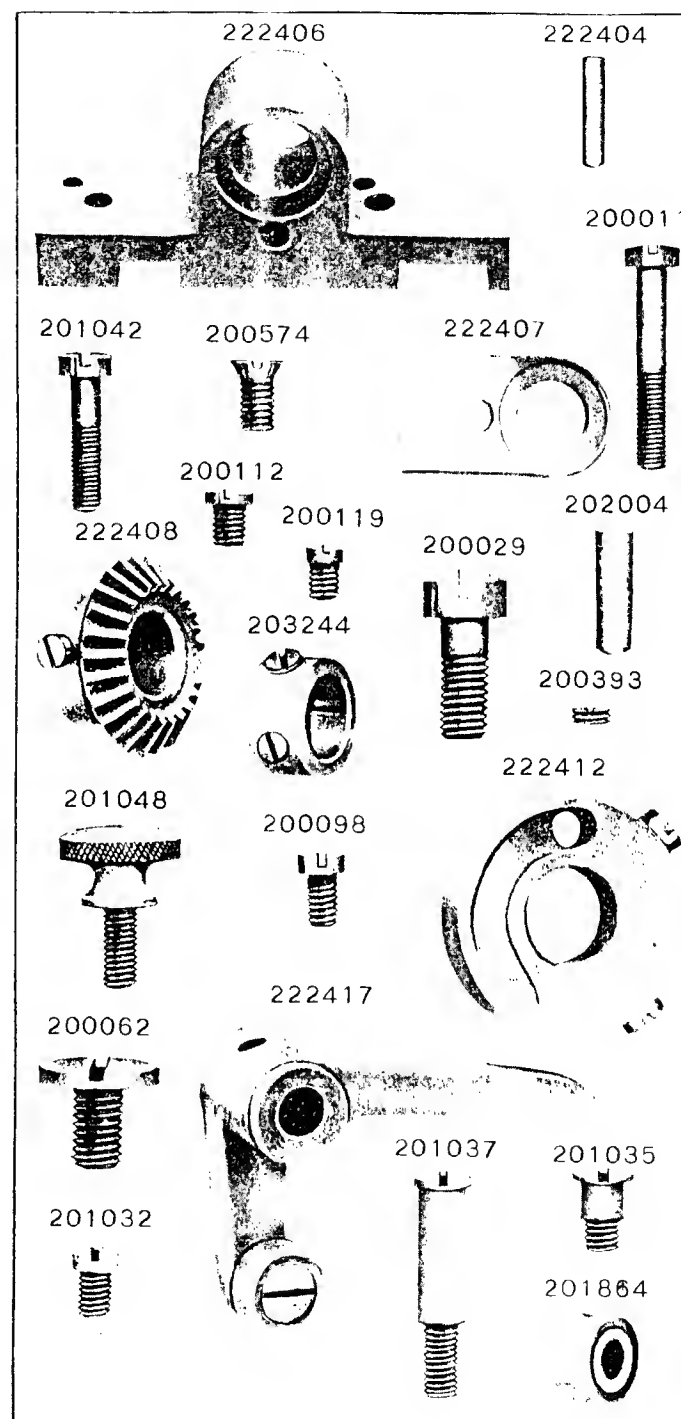 


PLATE 12433 - FULL SIZE

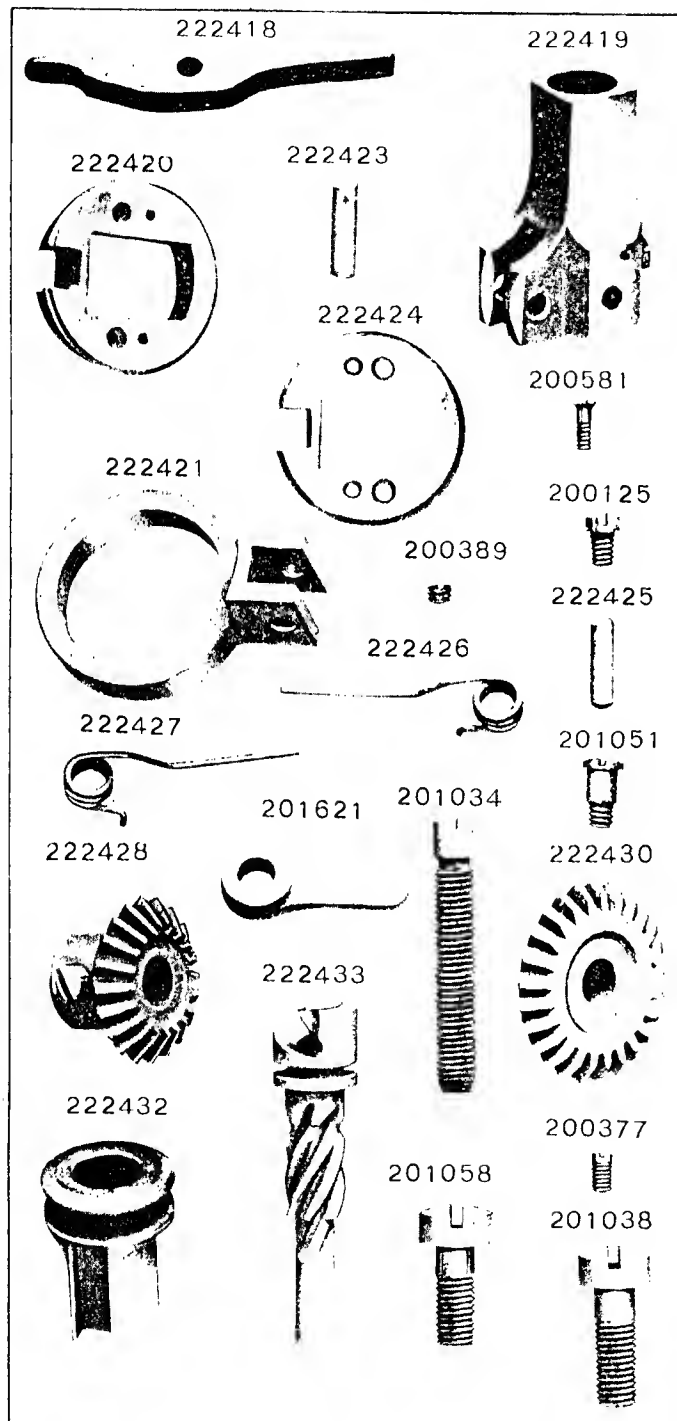 


PLATE 12434 - ONE-HALF SIZE

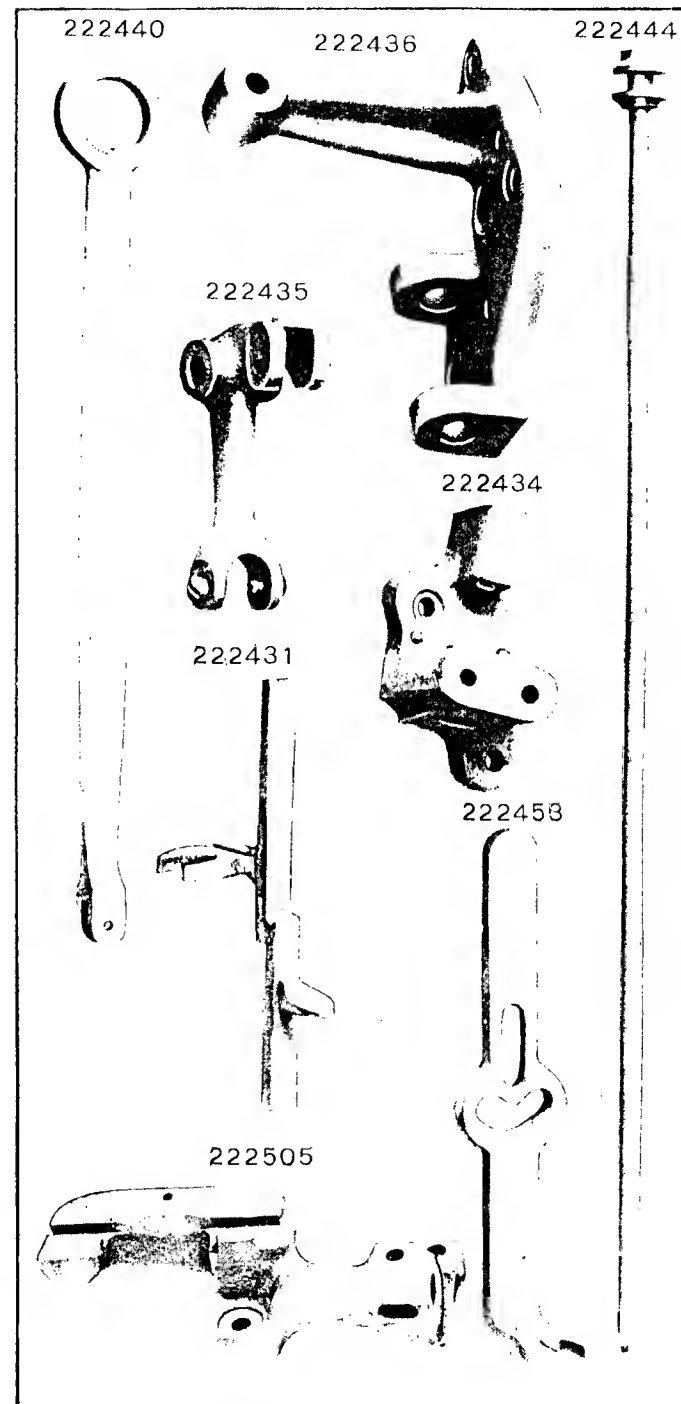 


PLATE 12435 - FULL SIZE

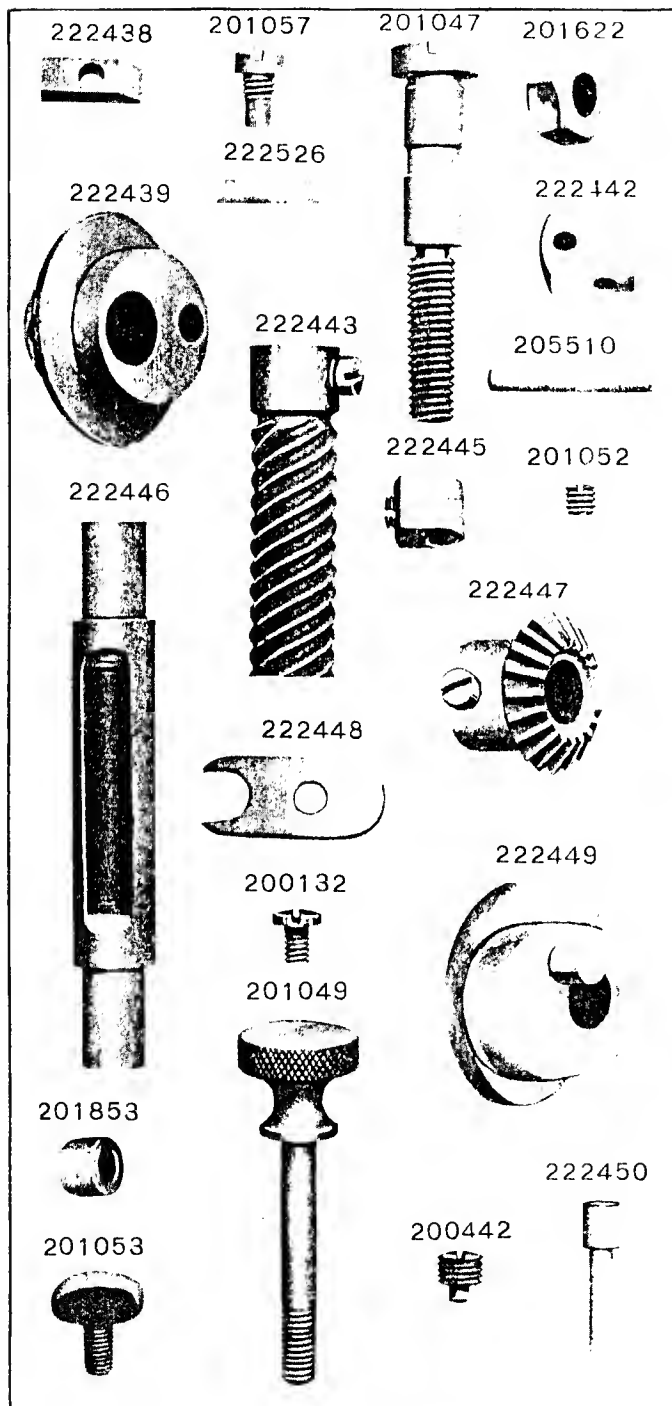 


PLATE 12436 - FULL SIZE

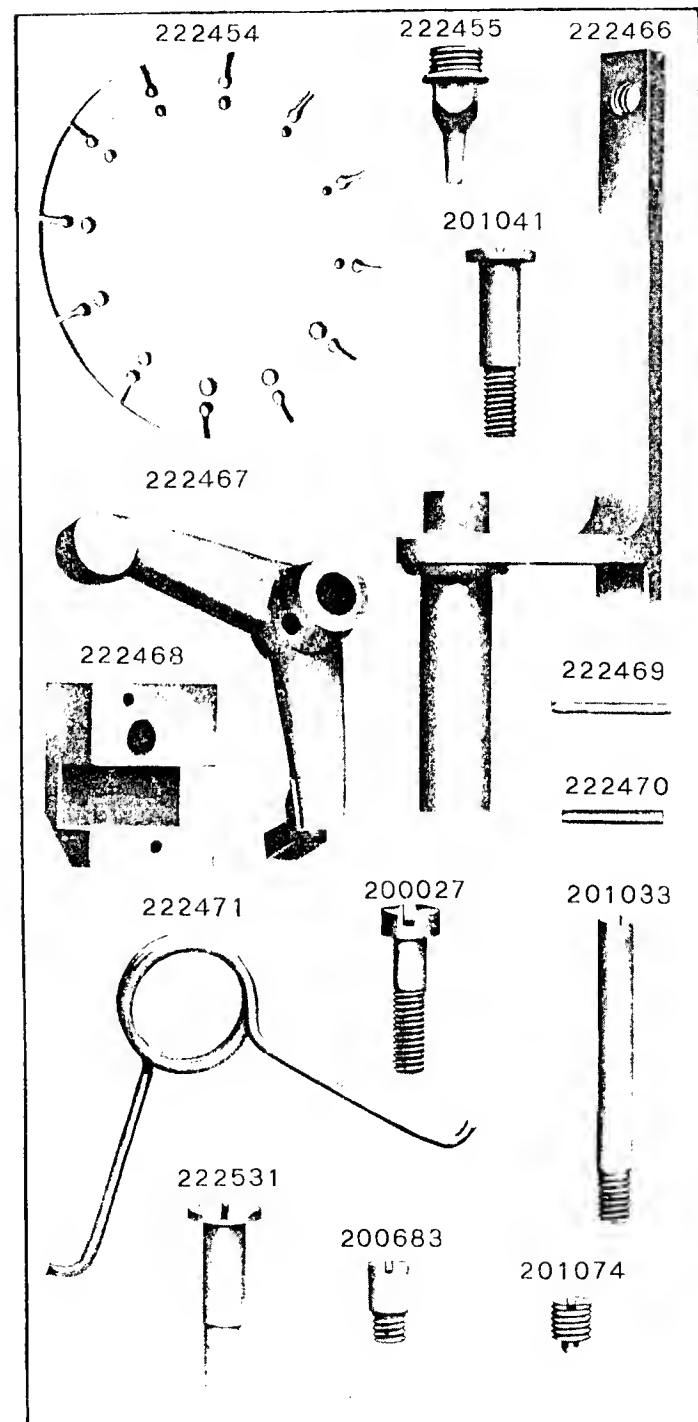 


PLATE 12437--ONE-HALF SIZE.

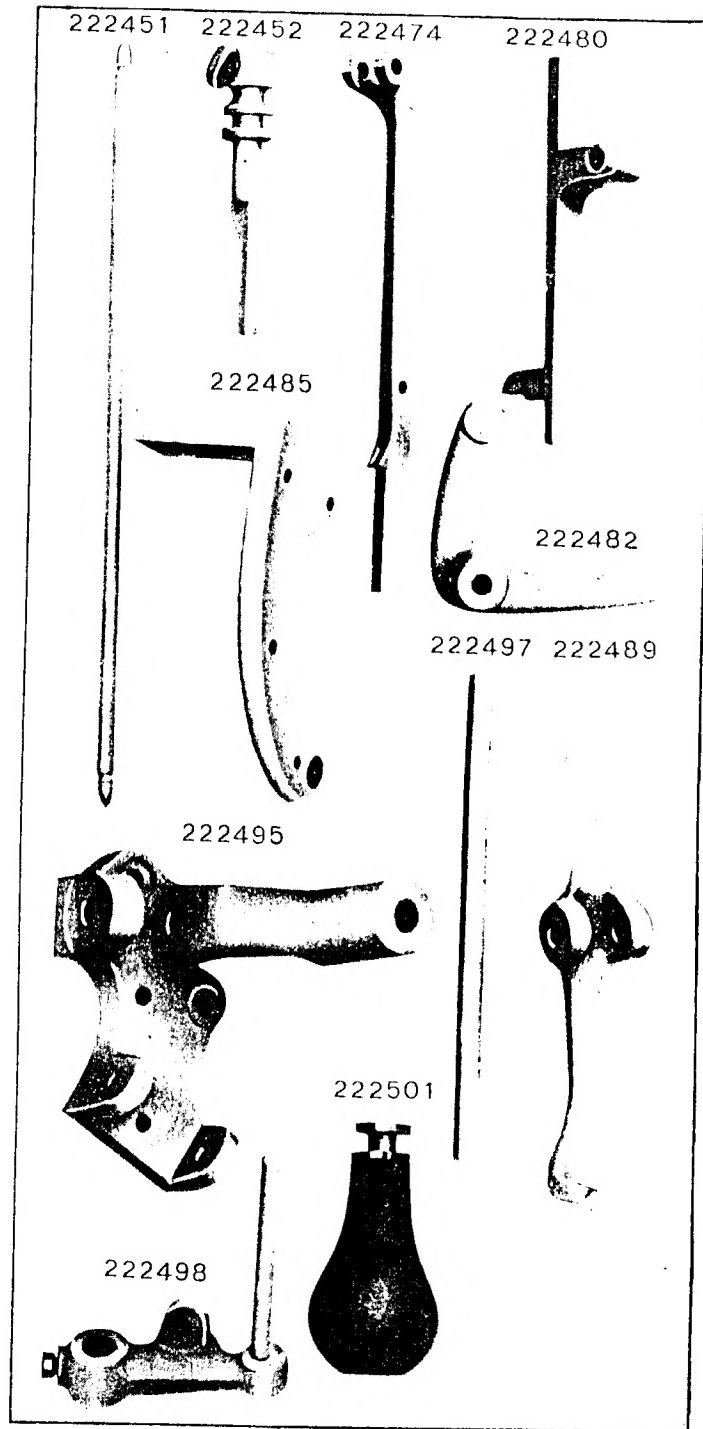 


PLATE 12438--FULL SIZE

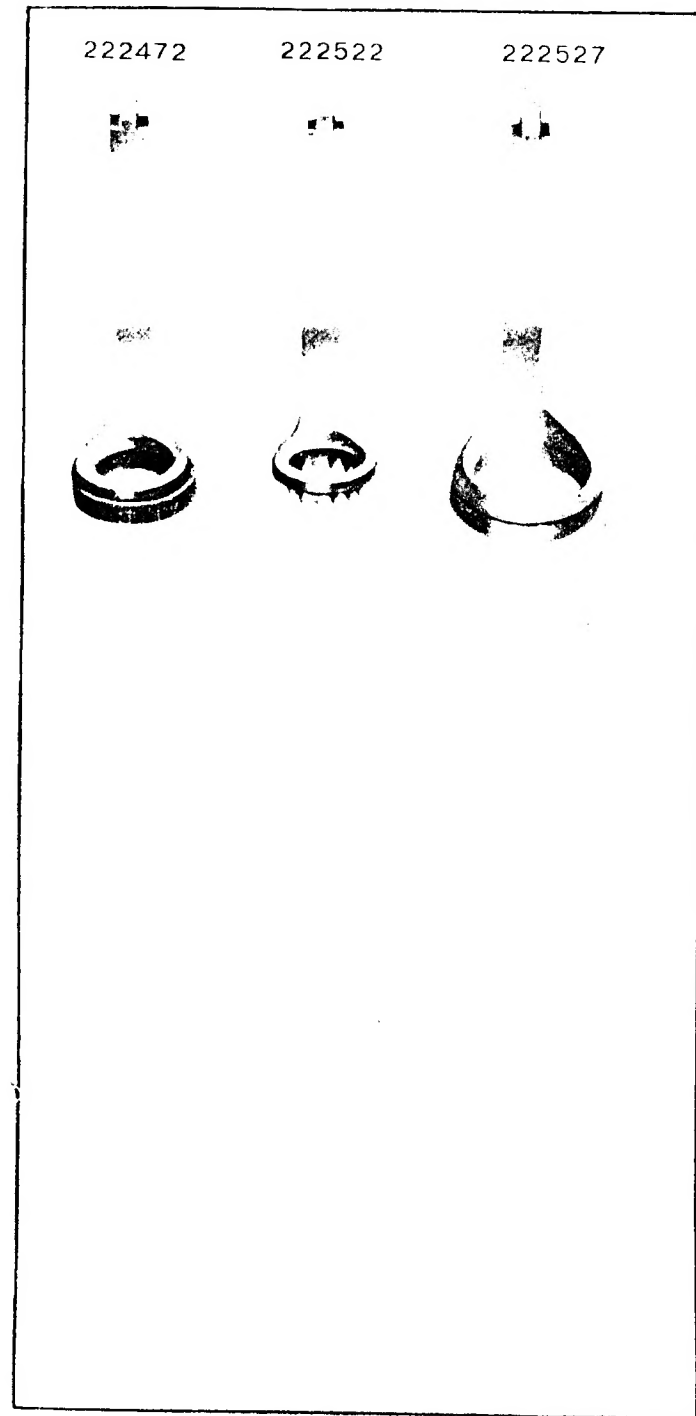 


PLATE 12439-FULL SIZE

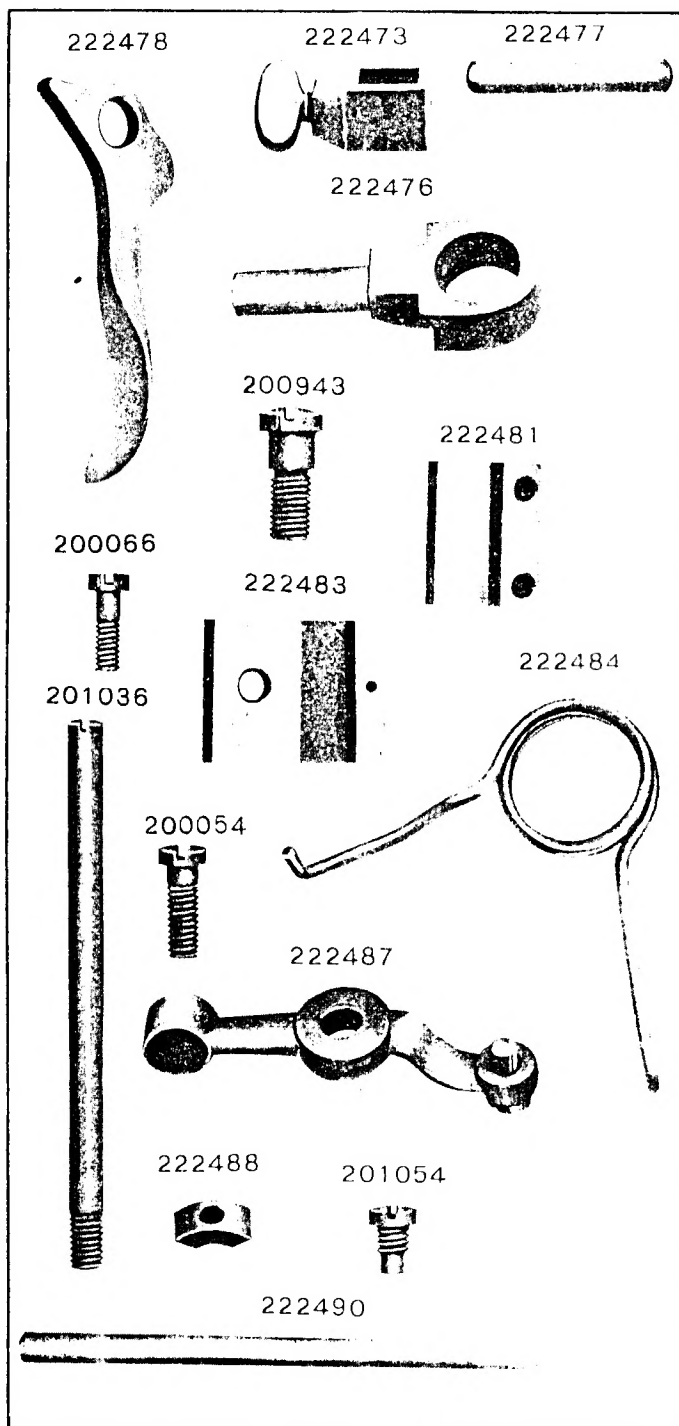 


PLATE 12440-FULL SIZE

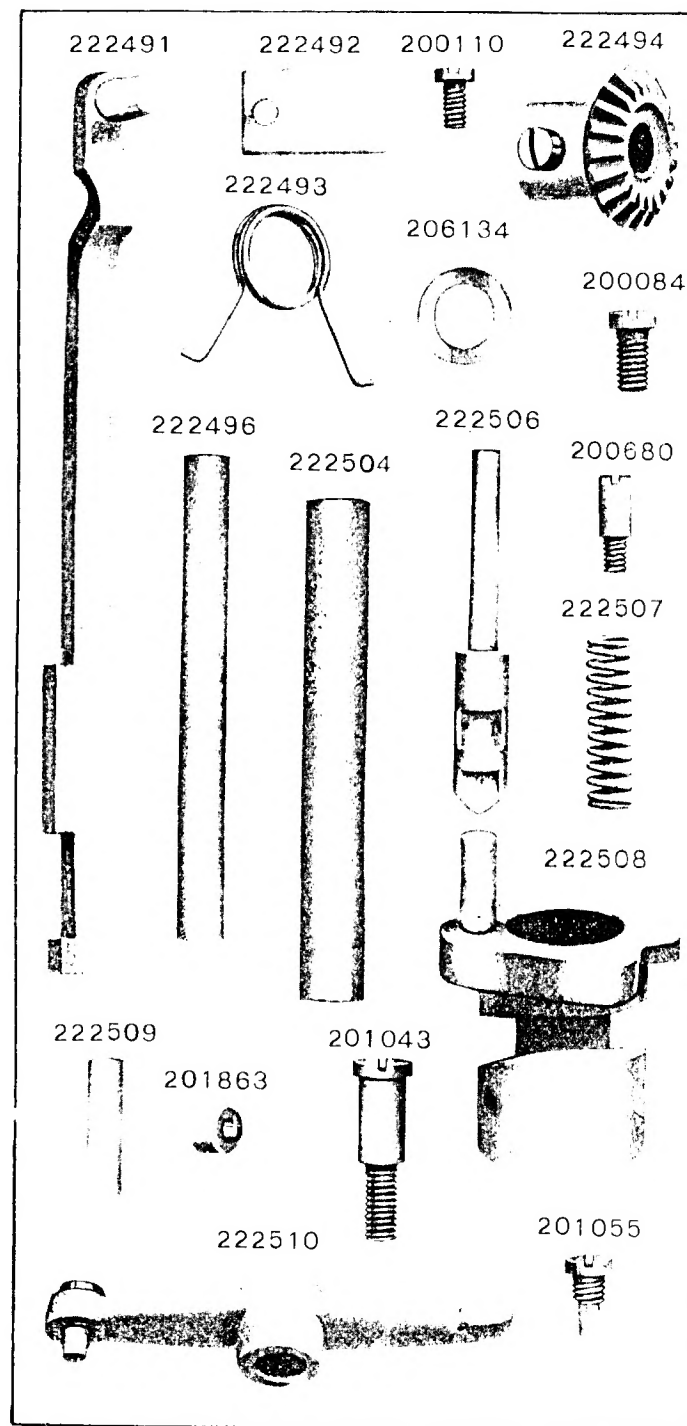 


PLATE 12441 -FULL SIZE

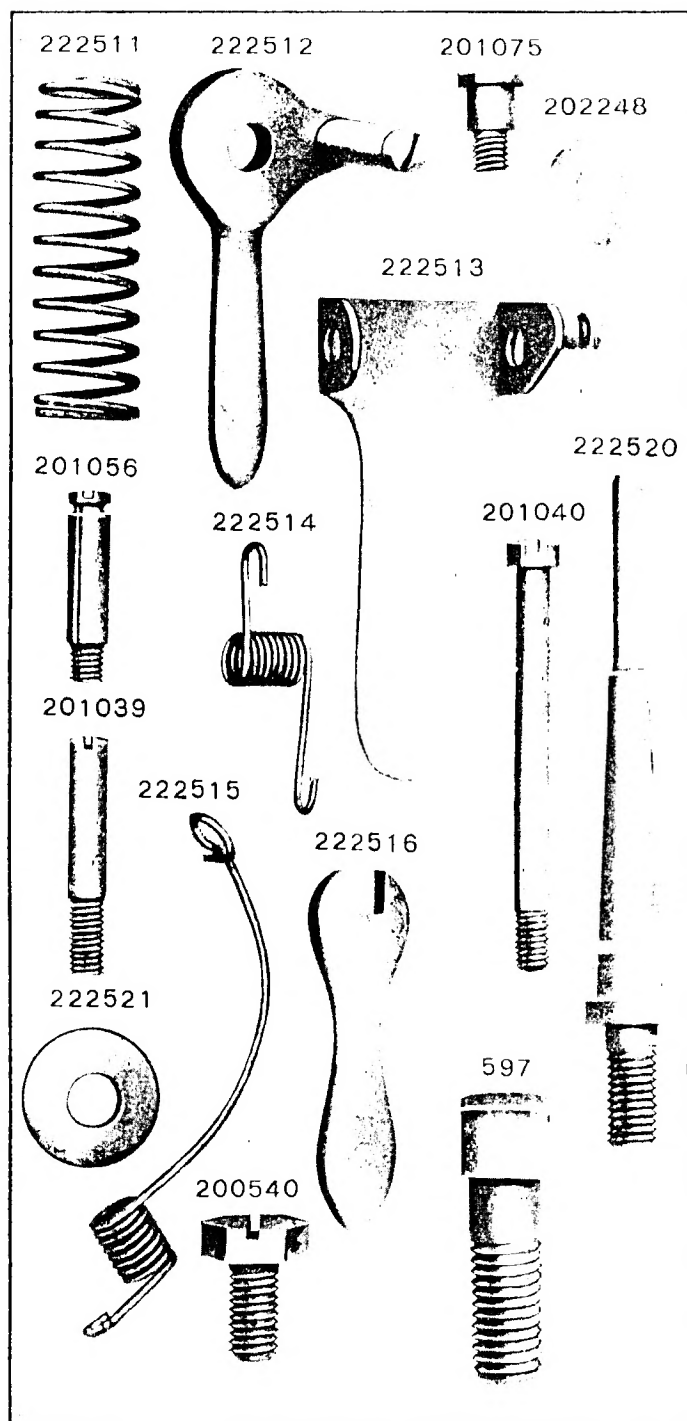 


PLATE 12442 -ONE-HALF SIZE

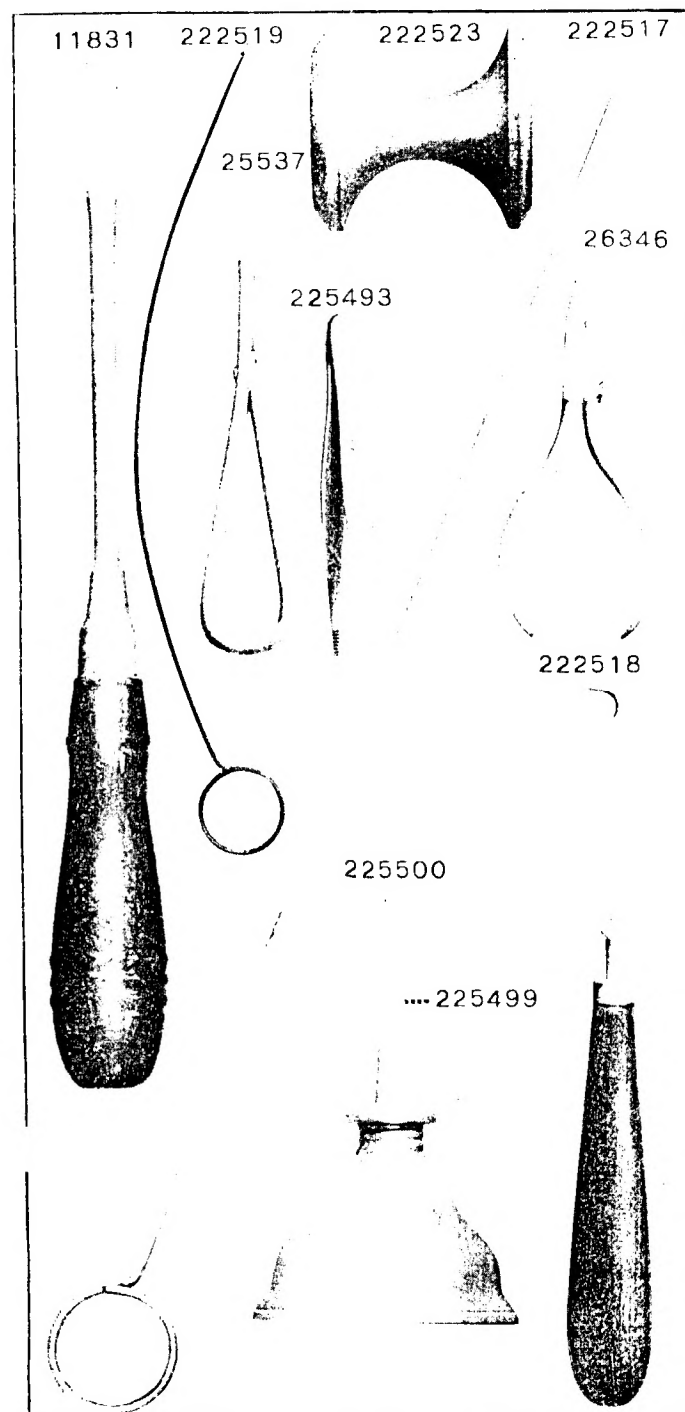 


PLATE 12443 -FULL SIZE


 
 
 
 
 
 
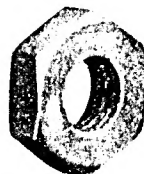 


PLATE 12444 - ONE-NINTH SIZE

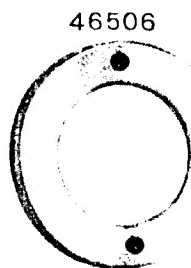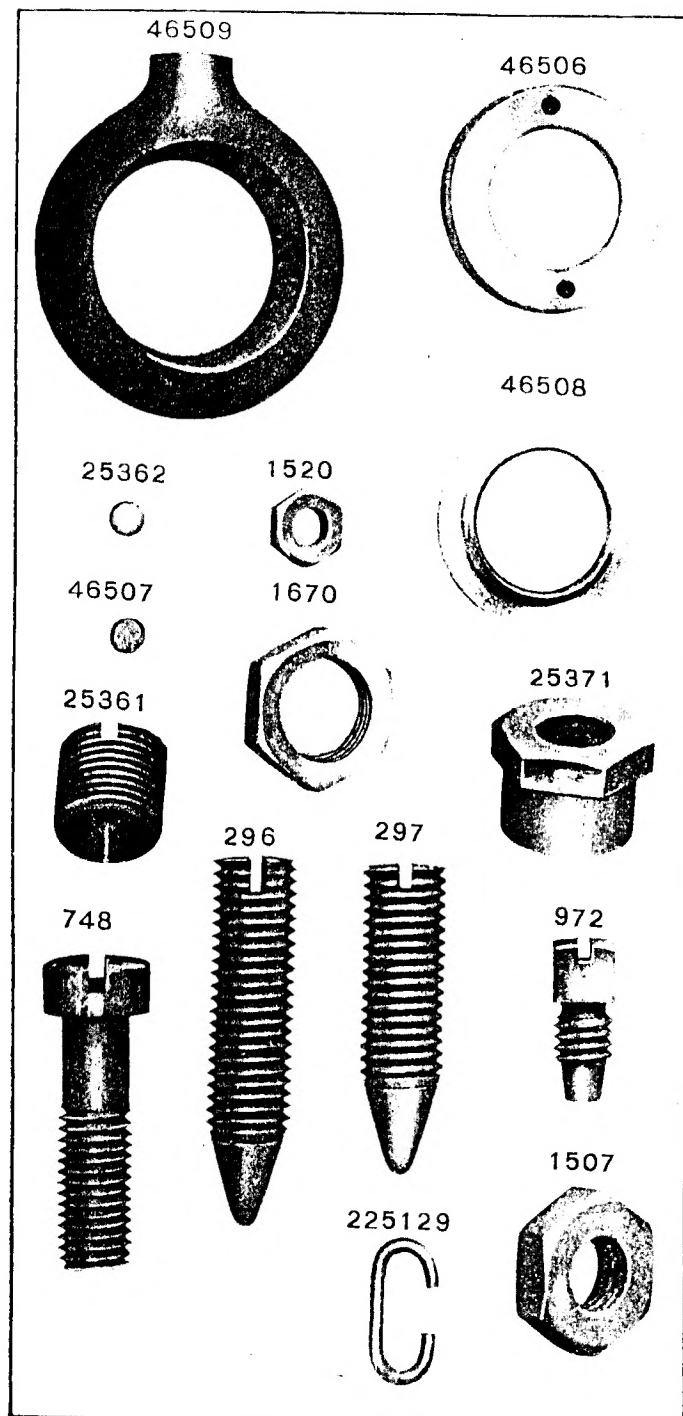 